

1200B

## Turning Equipment On

Turn on in any order:

1. Document Camera
2. Computer
3. Video Projector

### Switching Between Sources:

(NOTE: Computer runs through Document Camera. Document Camera *must* be on to see Computer)

*From Document Camera to Computer:*

With Projector on "*Computer*," switch Document Camera to "*Ext 1*" with the "**Int/Ext**" button on the front of the Document Camera.

*From Computer to Document Camera:*

With Projector on "*Computer*," switch Document Camera to "*Internal*" with the "**Int/Ext**" button on the front of the Document Camera.

## Turning Equipment Off

Turn off in any order:

1. Video Projector
2. Computer
3. Document Camera

**In case of emergency, call Media Services at x3295.**