

Turning Equipment On

Turn on in any order:

1. Document Camera
2. Computer
3. VCR
4. Video Projector
5. Sound Amplifier/Speakers

Switching Between Sources:

From Computer or Document Camera to VCR:

1. (To Document Camera) Switch Projector to "Video" with the "**Input**" button on the remote to the Projector. Switch *S-Video out* cable from the back of the VCR to the Document Camera
2. (To VCR) With Projector on "Video," switch *S-Video out* cable from the back of the Document Camera to the VCR.

From VCR or Document Camera to Computer:

1. Switch Video Projector to "Computer" with the "**Input**" button on the remote to the Projector.

Turning Equipment Off

Turn off in any order:

1. Sound Amplifier
2. Video Projector
3. VCR
4. Computer
5. Document Camera

In case of emergency, call Media Services at x3295.